

## 1-2. Key information

### Keys

The following keys are provided with the vehicle.



#### 1 Electronic keys

- Operating the smart access system with push-button start (→P. 13)
- Operating the wireless remote control function (→P. 22)

#### 2 Mechanical keys

#### 3 Key number plate

1

Before driving

### Using the mechanical key



Take out the mechanical key.

You can use the mechanical key to lock/unlock the doors, and to unlock the trunk.

#### n When required to leave a key to the vehicle with a parking attendant

Turn the trunk opener main switch OFF and lock the glove box as circumstances demand. (→P. 30, 307)

Remove the mechanical key for your own use and provide the attendant with the electronic key only.

#### n Key number plate

Keep the plate in a safe place such as your wallet, not in the vehicle. In the event that a mechanical key is lost, a new key can be made at your Lexus dealer using the key number plate. (→P. 473)

## 1-2. Key information



### NOTICE

#### **n To prevent key damage**

- i** Do not disassemble the electronic key.
- i** Do not bend the keys, expose them to high temperatures by placing them in direct sunlight, or get them wet.
- i** Do not expose the keys to electromagnetic materials or attach any material that blocks electromagnetic waves to the key surface.